

# CANON POWER SHOT A70

*(Easy directions for first time users)*

## Inventory Your Materials

### ***I. Open box and make sure all things are there:***

1. Camera
2. USB and Video Cable
3. Instruction Manuals (Four manuals and Quick Start Guide)

### ***II. Check the right side of the camera. See the words “CF OPEN” below the pink ID sticker.***

1. Gently slide open the hinged door.
2. Push the black button to access the 128 MG Kingston Flash memory card.
4. Push the card back in and gently click close the door.

### ***III. Check batteries.***

1. On the bottom of the camera is a “BATT. OPEN” door.
2. Check that the four batteries are facing the same as the diagram.
3. Close the battery door gently.
4. If camera stops working replace batteries.

## Simple Intro

### ***I. Check the four main buttons***

1. The small round button “ON/OFF” is the button to turn on the camera.
2. The shiny round button on the top of the camera, the right front is your shutter.
3. The big round wheel at the top with the letters and icons and set the wheel to “AUTO”.
4. On the back of the camera is switch that points to either a green arrow or a camera icon. Set the little dot to next to the camera icon to take a picture.

### ***II. Take a perfect picture***

1. Click the ON/OFF button.
2. Point camera at subject to be photographed.
3. Press the shutter button **half way** until you hear two beeps. These beeps mean that your subject is in focus.
4. Continue to press down until you hear the click.
5. See the recorded image on the display for about two seconds.

***NOTE: You are responsible for replacing batteries and returning all materials.***

